


setralite™ Model Overview

Simple • Cost Effective • Intuitive

Key Features

- Simple single-room pressure indication for all pressurized spaces
- Integrated Setra Pressure transducer
- Visual alarm via red/green light ring
- Door delay
- Configurable audible alarm
- Digital display can be always-on or momentary
- Analog Output
- Easy configuration
- Sleek and attractive single wall plate

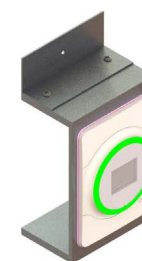

Standard

Dual Alert

Quick Mount Kit

| | Standard | Dual Alert | Quick Mount Kit |
|---------------------------|---|--|--|
| Use Case | Simple permanent monitoring of airflow | Simple permanent monitoring of air flow where status is desired in both spaces | Simple temporary monitoring of airflow |
| Set Up | <ul style="list-style-type: none"> • Flush mount install with 2" holesaw or in std single gange box • Install 24 VAC/VDC wiring | <ul style="list-style-type: none"> • Flush mount install with 2" holesaw or in (2) std single gang boxes OR • Flush mount install where previous thru wall monitor • Apply 24VAC/VDC wiring | <ul style="list-style-type: none"> • Quick mount on a simple hook or screw • Apply 24VAC/VDC via wiring or portable power supply |
| Kit Includes | <p>Setra Lite Base Unit - Specified by customer</p> <ul style="list-style-type: none"> • Pressure Pickup Port (Setra RPS) • Mounting Hardware • Elbow Connectors • 250ohm resistor (If wiring inputs for 4-20mA current loops) | <p>Setra Lite Base Unit - Specified by customer</p> <ul style="list-style-type: none"> • LED alarm indicator 18" pigtail prewired • Pressure Pickup Port (Matching Dual Alert Variant) • 18" of rubber connecting tubing • Mounting Hardware • Elbow Connectors • 250ohm resistor (If wiring inputs for 4-20mA current loops) | <p>Setra Lite Base Unit - Specified by customer</p> <ul style="list-style-type: none"> • Pressure Pickup Port (Setra RPS) • Battery Pack • AC Adapter with 6-foot cord • Mounting bracket |
| Mounting | Single-gang US electrical box, China 86 box, European back box, or equivalent interior dimensions Direct to Wall | Single-gang US electrical box, China 86 box, European back box, or equivalent interior dimensions Direct to wall | Temporary mounting plate with single clearance hole |
| Sample Part Number | LITE050LBDWPVOAN | LITE050LBDWPVOAD | LITE050LBDWPVOAM |



Setra Systems, Inc.

159 Swanson Road Boxborough, MA 01719
800.257.3872 • www.setra.com